
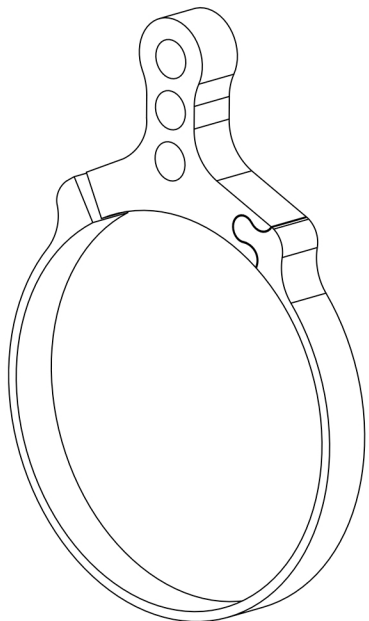



ENHANCED CONTROL SURFACE 1 INSTALLATION INSTRUCTIONS

⚠️ ENSURE FIREARM IS UNLOADED AND SAFE

⚠️ WARNING: DAMAGE CAUSED BY OVER-TORQUED FASTENERS NOT COVERED BY WARRANTY.

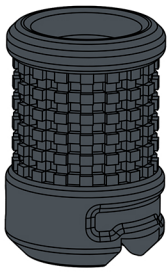

1 PRESS ECS1 KNOB ONTO SWITCHVIEW LEVER, ENSURE FIT IS SNUG. IF ECS1 KNOB WIGGLES REMOVE AND ADD A SINGLE STRIP OF GAFFER TAPE TO TOP OF LEVER, THEN REINSTALL.

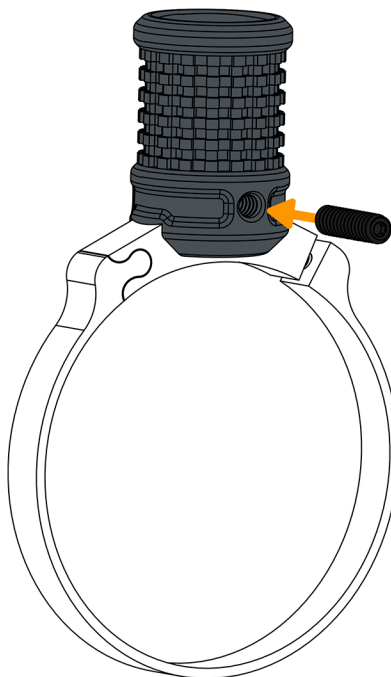

2 INSTALL INCLUDED SET SCREW USING $1/16"$ HEX KEY. INSTALL TO A DEPTH OF $1/8"$ BELOW SURFACE OF ECS1 KNOB USING HAND TIGHT FIT.

DO NOT TORQUE PAST 5 IN-LBS.

3 VERIFY ECS1 KNOB DOES NOT INTERFERE WITH EQUIPMENT ON RIFLE INCLUDING OFFSET IRONS, OFFSET DOTS, COSINE INDICATOR, ANTI-CANT DEVICES ETC.

